
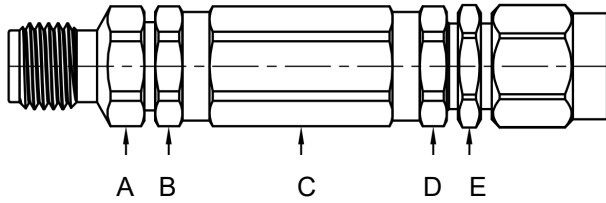
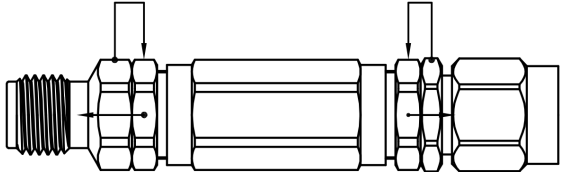
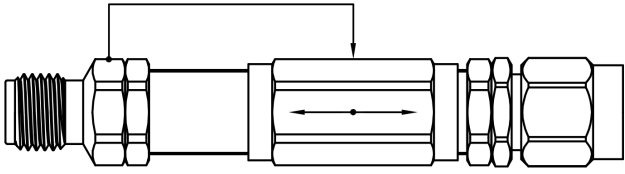


Operating Instructions for Phase Trimmer/Shifter

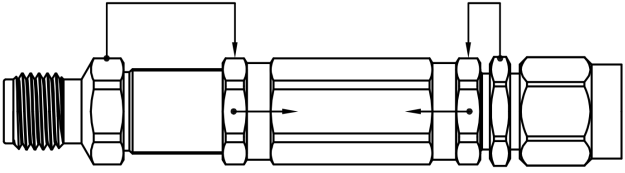

- A- Body 1
- B- Lock Nut 1
- C- Adjustment Nut
- D- Lock Nut 2
- E- Body 2

STEP	DIAGRAM	INSTRUCTION
1	 <p>The diagram shows the assembly with arrows pointing to lock nut B and lock nut D, indicating they should be loosened.</p>	<p>Loosen B (Lock Nut 1) and D (Lock Nut 2) before adjusting phase.</p>
2	 <p>The diagram shows the adjustment nut C with a double-headed arrow indicating it can be turned in either direction to adjust the phase.</p>	<p>By manually turning C (Adjustment Nut) in order to get the desired phase.</p>
3	 <p>The diagram shows the assembly with arrows pointing to lock nut B and lock nut D, indicating they should be tightened.</p>	<p>After phase adjustment, tighten B (Lock Nut 1) and D (Lock Nut 2) with recommended torque 0.9-1.1Nm.</p>