

**WR90 to TNC Female Waveguide to Coaxial Adapter  
UBR100 Flange, End Launch**


Rev 5

**Electrical**

Frequency Range	8.2-12.5 GHz
VSWR	1.3 max

**Configuration**

Waveguide Size	IEC	R100
	EIA	WR90
Flange	IEC	UBR100
	North America	Al alloy: M3922/53-003(UG135/U) Cu alloy: M3922/53-001(UG39/U)
Coax Connector	TNC Female	
Body Geometry	End Launch	

**Mechanical & Environmental**

Waveguide Body	Aluminum, conductive oxidation, anti-corrosive paint
Connector Body	Passivated stainless steel
Center Contact	Gold plated beryllium copper
Operating Temperature	-40°C to +85°C
Connector Interface	MIL-STD-348
RoHS	Compliant under exemptions 6 (b) or 6 (c)
Net Weight	Approx 70g

**Note**

\* Flange size may not be 100% identical with the above listed standards, but are compatible. Refer to the next page for comparison table.


\* Paint in grey or black by default, other colors available.

**WR90 to TNC Female Waveguide to Coaxial Adapter  
UBR100 Flange, End Launch**




Rev 5

**Dimensions(mm)**

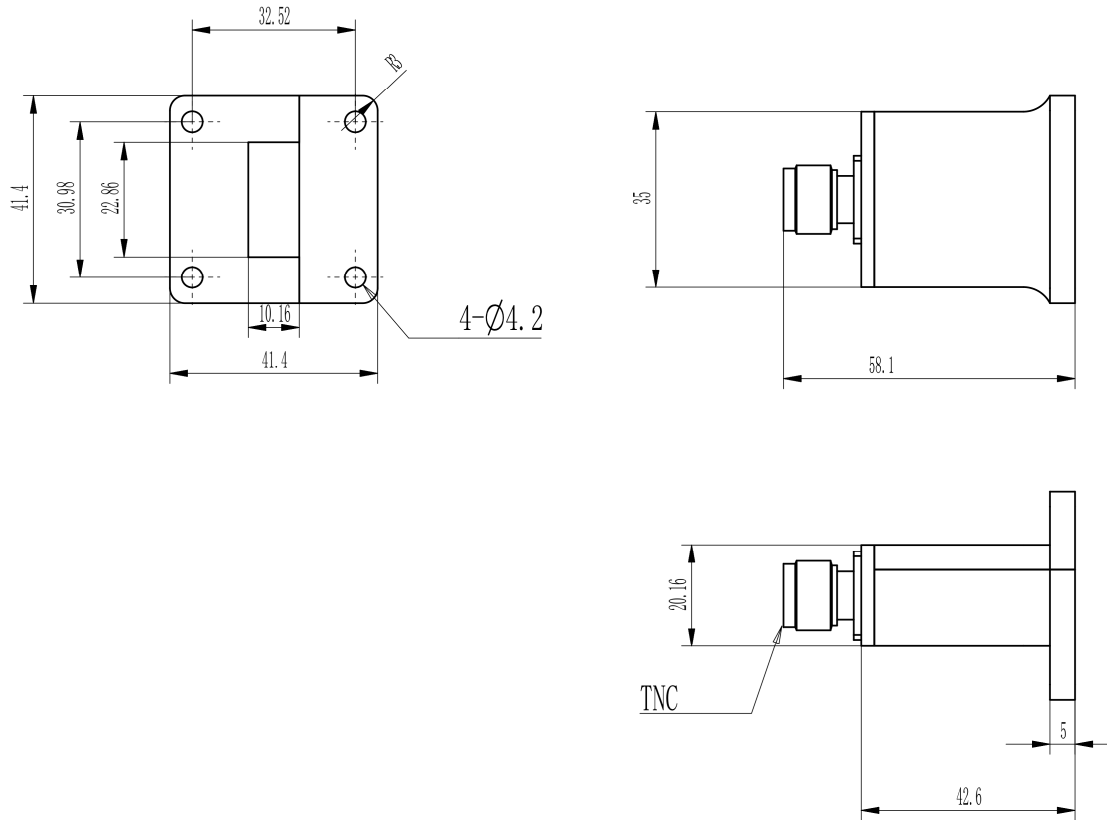

**Flange Comparison (mm)**

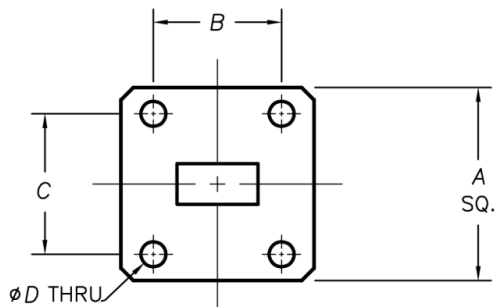

\* The purpose of this comparison is to provide a quick reference of different flange standards. Great care has been given, nevertheless there might be a few mistakes.


\* Please check the flange compatibility before ordering. Customized flanges are available.

WG SIZE	CONFORMING STANDARD	A	B	C	D
WR90	RF ONE:AWR90TEL	41.4	30.98	32.52	4.2
	IEC60154:UBR100	41.40	30.98	32.52	4.1
	USA:MIL3922/53-003(UG135/U)	41.28	30.98	32.52	4.29




**WR90 to TNC Female Waveguide to Coaxial Adapter  
UBR100 Flange, End Launch**

**Typical Test Data at 25°C**

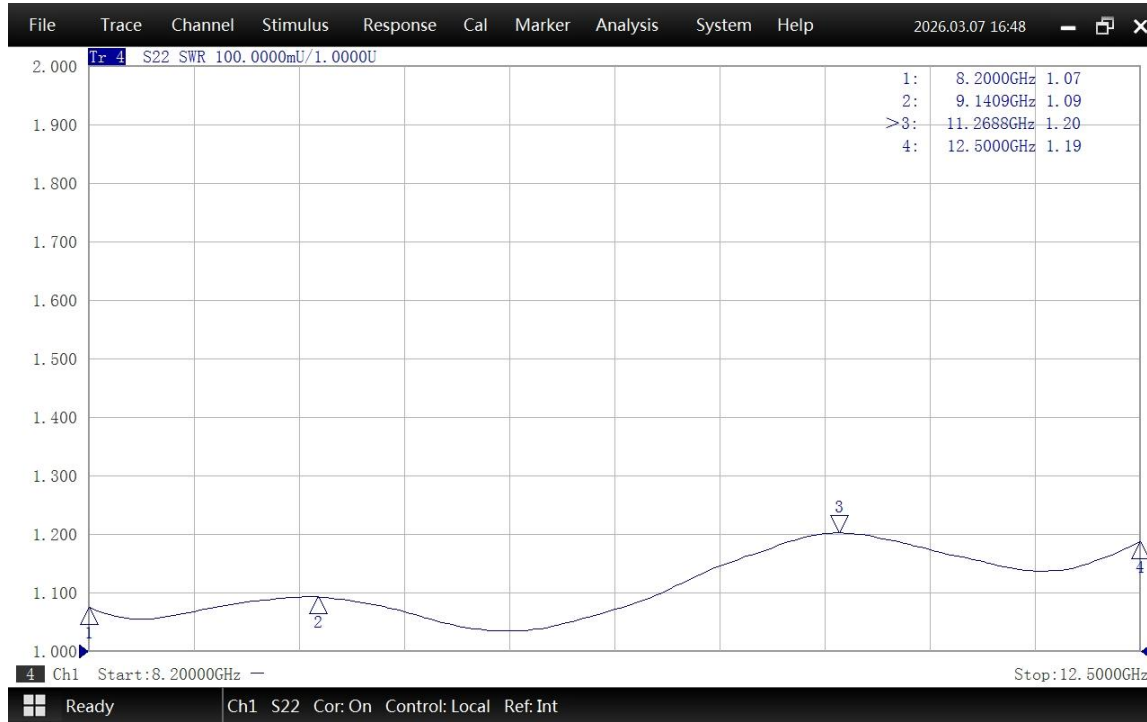

VSWR

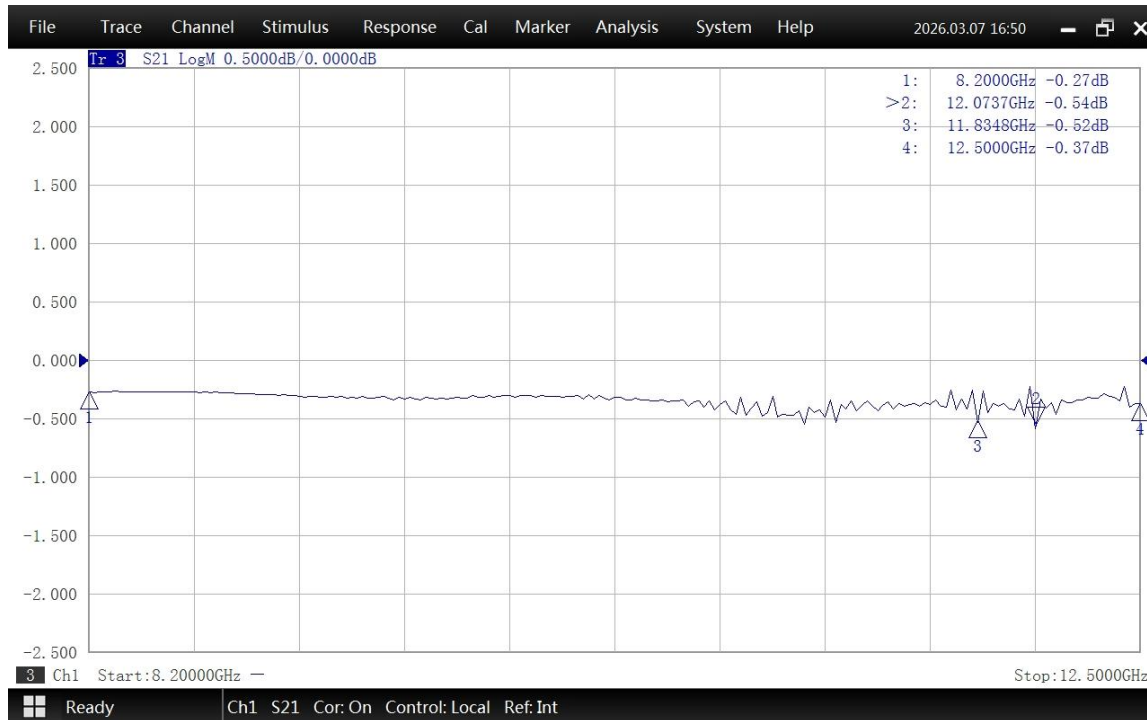

Insertion Loss\*

\* In Insertion Loss (IL) testing, adapters are measured back-to-back. To obtain the loss of a single adapter, divide the measured value by two.